

Operation Manual

May, 2007 revised Covering Model

SHWB-30/45

Shaking Water Bath



Before operating this unit, Please read & understand this manual completely and Keep it for future reference.





HumanLab Instrument Co.


Safety warnings



Before operating, read and understand safety warnings thoroughly And use this equipment properly. Keep these warnings in mind for your safety.

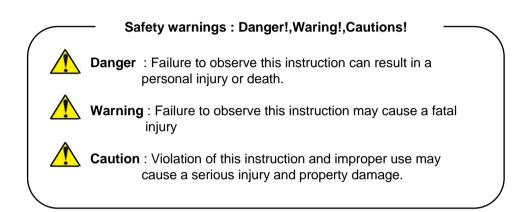

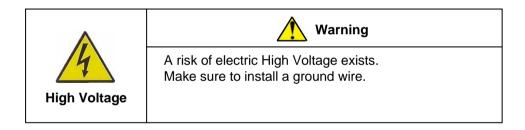

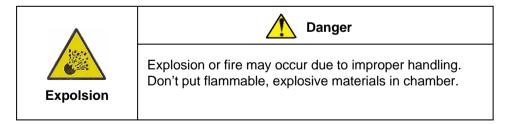


	Caution
Electric Shock	A risk of electric shock exists. Make sure to install a ground wire. Electric shock may occur without a ground wire installation

Features

This Economical digital shaking water bath has following features ;

- 1) Adjustable temperature and speed give you value and versatility.
- 2) Stabile reciprocation action, and low noise
- 3) Easy set the temperature and revolution, and high accuracy of the temp. control by digital PID controller.
- 4) Seamless corrosion resistant stainless steel chamber with removable tray are easy to maintain.
- 5) This shaking water bath holds a variety of flasks, test tubes for spring rack.
- 5) Built-in the drain cock for drainage of bath

Installation

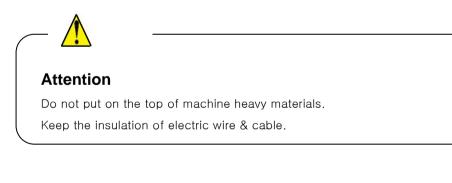

- 1) Install the equipment on a firm area avoiding heat, humidity, dust and vibration.
- 2) Place it in a well ventilated area with enough space.
- 3) Install it horizontally on a firm and stable surface.
- 4) The door can open to an angle of 180 degree, please consider enough space.

Safety Warning

Danger

- Do not put flammable, explosive materials in the chamber.
- Explosion or fire may occur due to improper handling




Attention

- Keep away the flammable materials.
- Do not touch the electric cable by wet hands.
- Make sure to wire the ground connection.



- Make sure to supply the electric power of 240V,50 Hz.
- Keep away from the instruments use much electric power, it may cause the malfunction of this machine
- Do not use benzene, soap, detergent and hot water while cleaning. it causes the damage of parts and malfunction of instruments.
- Keep cleaning by the water when use the neutral detergent.
- Full out the electric plug when this machine do not operate for a long days.
- Keep the insulation of all electric wire and cable.

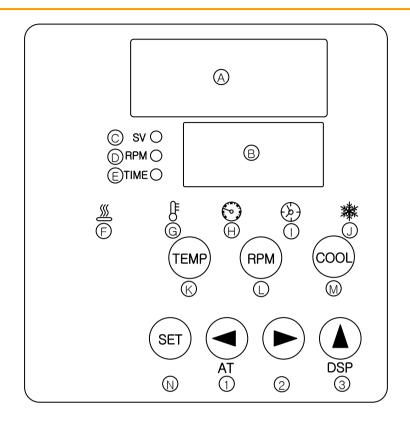

Name and Function

- A Current Temperature
- B Set Temp, Current Speed, Time
- © LED of Set Temperature
- D LED of Current Speed
- E LED of Time
- F LED of Heater power
- G LED of Temp.control
- (H) LED of PRM control
- () LED of Actual Time


- J LED of Cooler On/Off
- K On/Off Switch of Temp. Control
- C On/Off Switch of RPM Control
- M On/Off Switch of Cooler
- (N) Select Switch of Data Change
- 1 Auto tuning & Left
- 2 Right
- 3 Add the Value & Display

Initial Mode


When the electric power supply, it displays the temperature of chamber on A

And (B) indicates "set temperature", or "RPM", or "Time".

B display each value whenever push the "DSP" button.

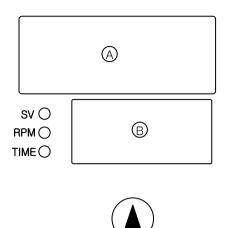

Set Value

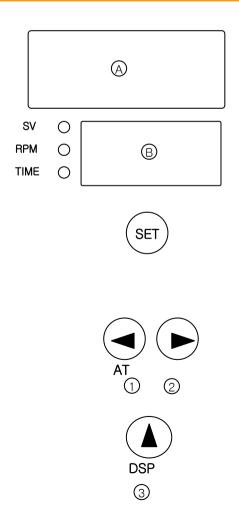


(A) is the input mode of "TEMPERATURE" to push the "SET" button one time while "SV" lamp is blinking on the right of (B).
(A) is the input mode of "RPM" to push the "SET" button two times while "RPM" lamp is blinking on the right of (B)
(A) is the input mode of "TIME" to push the "SET" button three time while "TIME" lamp is blinking on right of (B).

It can move to each digit to input the value to push \bigcirc toward right, or \bigcirc toward left.

The value input to push "DSP" button (3).

Operation

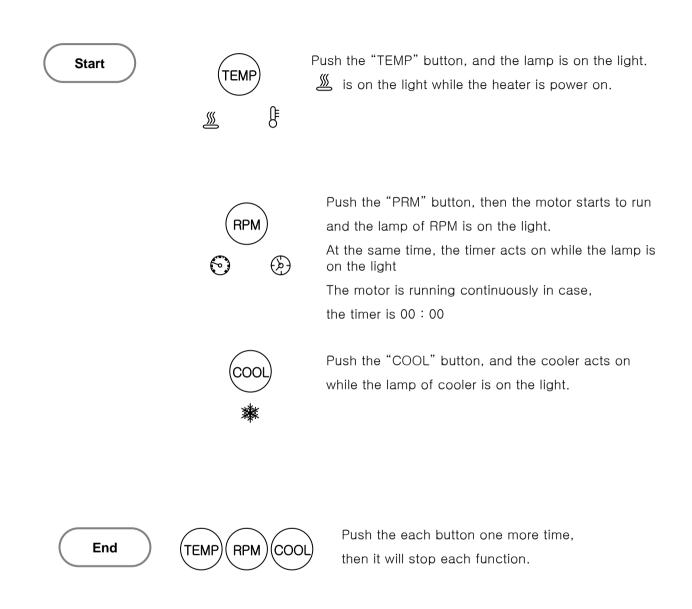



This auto tuning function measure and set automatically the value to fit for P.I.D. and ARW (Anti Rest Wind-Up).

This function can acts at any time while heating up and/or stabile running. The auto tuning starts to push the "AT" button 5 seconds later while the buzzer sounds alike "bee---".


If it will stop this function, then push the "AT" button while 5 seconds. Then, the lamp of AT is out of light, and release this function. This auto tuning function is pre-set, and no need set process.

In case, this function is not stabile, please try to do it.

NOTICE

- * The "AT" function acts while the temp. mode to push the button 5 sec. later.
- * The "DSP" function uses the selection of TEMP/RPM/TIME without "INPUT MODE".

Maintenance

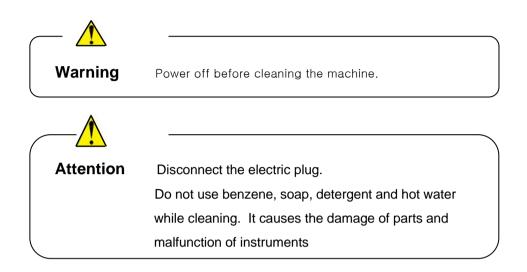

- 1) Cleaning the interior
- -. Disconnect the electric plug.
- -. Remove the selves and self hangers.
- -. Clean the dirty by brush or cleaner.
- 2) Cleaning the exterior
- -. Wipe the rug or sponge wetted by neutral detergent,
- -. Polish by dried woven fabric.
- -. Do not use organic solvent.
- 3) Cleaning the electric components
- -. Use the dried woven fabric.
- 4) Stand by for a long time
- -. Disconnect the electric power source.
- -. Wipe the exterior and interior of machine
- -. Warp the machine and store it.

Trouble Shooting & Repair

Switch off the main power when repair the machine.
Do not disassembly, repair and transform of the machine
except service engineers.

Trouble	Remedy		
Do not start the machine	 Check the power cable to connect or not. Make sure the power switch "ON" 		
Low capacity of heater	Check the condition of heater is good or not.		
Low temperature	 Check the set temperature. Check the set value of over temp protection. Check the heater is "ON". 		
Malfunction of Controller	 Keep away from the machine the instrument use large capacity of electric power. 		

After Service

1) We guarantee 24 months in conditions of normal operation.

However, the machine or component were occurred the trouble,

then please let us know the details of as under;

- -. Detailed description of trouble and parts
- -. Machine Model.
- -. Manufacture or Purchase date.
- 2) We cannot guarantee the trouble occurred by as under;
- -. Mis-operation, unreasonable repairing and transform of machine by user.
- -. Transfer and handle roughly of the machine.
- -. Natural disaster and over current , voltage and frequency.
- -. Trouble occurred by mistake of operation.
- 3) Please let us know any furthers of this machine.

Technical data

	-	-	
Temp	Range	Amb. to 100 $^\circ \!$	
	Controller	Digital PID controller	
	Sensor	PT-100 Ohm	
	Accuracy	±0.5℃	
Timer	Controller	Digital display	
	Range	99hr 59min	
Material	Bath	Stainless steel	
	Out	Steel plate with powder coating	
	Heater	Stainless steel	
Working Range		180stroke/min	
Spring Rack		Stainless steel	
Stroke Length		30mm	
Safety		Over current glass fuse	
Motor		DC Motor 25W	
Power		AC 240V, 50Hz,1 ¢	

Specification

Model	SHWB-30	SHWB-45
Capacity	30Liter	45Liter
In Size (W $ imes$ D $ imes$ H)mm	500×300×200	600×300×250
Out Size (W×D×H)mm	670×340×250	770×340×300
Heater Capacity	1,500W	2,000W



HumanLab Instrument Co.

B-401,Jaeun Bldg,#417-33, Younghwa-dong,Jangan-gu, Suwon-si 440821, Korea

Tel : +82-31-256 3403 Fax : +82-31-256 3404 Email : sales@humanlab.co.kr www.humanlab.co.kr

Made in Korea

RECYCLABLE

2005-7A